

# model **7501T**

Tempered, Gravity-Fed, Portable Eyewash

# **FEATURES & BENEFITS**

## CONSTRUCTION

FDA approved high-density green polyethylene tank provides the light and durable construction required in a portable unit.

## MOUNTING

J-shaped stainless steel wall bracket makes for a well constructed portable mount for easy removal and re-mount.

#### **FLOW CONTROLS**

Pulling down the eyewash arm will begin flushing the 9-gallon (34.1 L) portable tank at .4 gpm (1.5 L) for a full 15 minutes, creating a full patterned flushing of the eyes.

### DESIGN

Tank comes complete with a wide-fill opening and threaded cap for quick inspection, cleaning, and filling. Unit also comes equipped with top and side handles making relocation easy.

## **TEMPERED WATER**

Heated, insulated blanket provides ANSI compliant tempered water in operating temperatures to -30° F (-34° C). Unit will stay tempered in non-extreme outdoor conditions (below  $100^\circ$  F (38° C)). Only tempered portable eyewash in the market.

# **OPTIONS**

- Water Additive: Model 9082, 'sterile' bacteriostatic preservative for use in portable eyewash stations. One 5 oz. (148 ml) bottle will preserve 5 to 20 gallons (18.9 to 75.7 L) of potable water for up to three months. Four bottles per carton.
- Waste Container: Model 9009 is a twenty-gallon (75.7 L) wastewater container constructed of tough yellow polymer resin. Unit is used to collect water during weekly testing of emergency equipment.

For more information, visit www.hawsco.com or call (888) 640-4297.




# **SPECIFICATIONS**

Model 7501T is a 9-gallon (34 L), tempered, gravity-fed portable eyewash with a NEMA 3R heated, insulated blanket to provide ANSI compliant tempered water in ambient operating temperatures to -30° F (-34° C). Ideal for remote locations without access to continuous potable water. 120V electrical requirement with supplied 8' GFCI power cord. Voltage and Haz Loc options available. Model 9082 additive not included - order separately.

# **APPLICATIONS**

Where the eyes of any person may be exposed to injurious or corrosive materials, when suitable facilities for quick flushing of the eyes needs to be provided and a continuous supply of water is not available. Although the 7501T may be installed in a wide variety of locations, it is ideal for remote areas where protective measures are still needed. Emergency eyewash equipment shall be in unobstructed and accessible locations that require no more than 10 seconds for the injured person to reach. Built with CSA certified components, and compliant to ANSI 7358.1

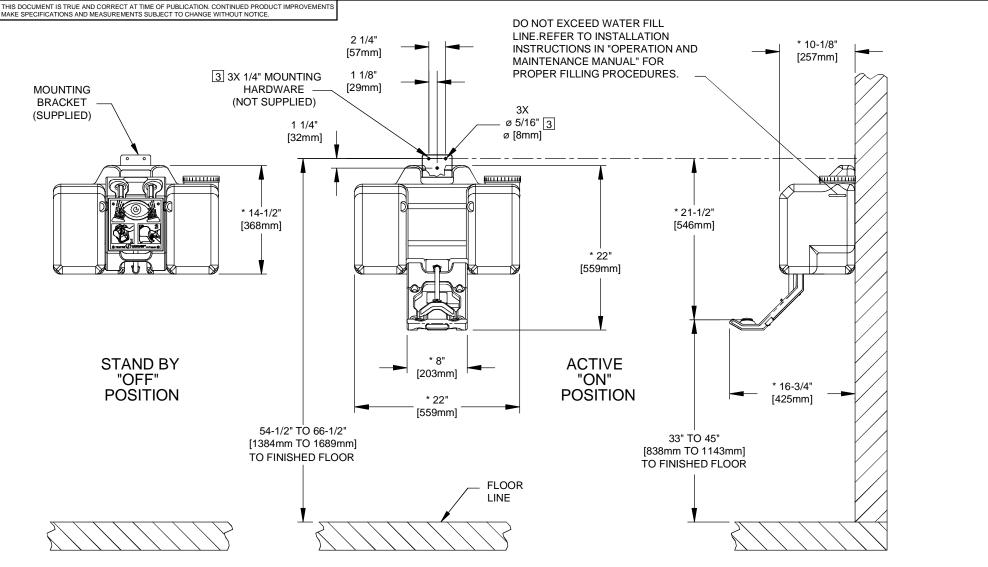

#### NOTES:

- 1. TO COMPLY WITH ANSI Z358.1-2009 FOR EMERGENCY EYEWASH OR EYE/FACE WASH AND SHOWER EQUIPMENT:
  - UNIT SHALL BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S INSTRUCTIONS AND ACCEPTABLE PLUMBING PRACTICES.
  - EYEWASH OR EYE/FACE WASH SHALL BE POSITIONED WITH NOZZLES NOT LESS THEN 83.8 CM (33 IN.) AND NO GREATER THAN 114.3 CM (45 IN.) FROM SURFACE ON WHICH USER STANDS AND 15.3 CM (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
- 2. UNIT MUST BE LEVEL FROM FRONT TO BACK AND SIDE TO SIDE.
- 3 ALL THREE MOUNTING HOLES ON MOUNTING-BRACKET MUST BE USED TO PROPERLY SECURE EYEWASH UNIT TO WALL.
- 4. \*DIMENSIONS MAY VARY ±1/2" [12.7mm].

MODEL 7501 (SHOWN) MODEL 7501T/7501T240 - WITH HEATED JACKET (SEE SHEET 1 OF 2)




1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM WEBSITE: WWW.HAWSCO.COM

ECN NO. REVISED PER BY: 5086 ECN: 5086 | E

PORTABLE EYEWASH 7501/7501T/7501T240

PART NUMBER 0002080045.D REVISION 14

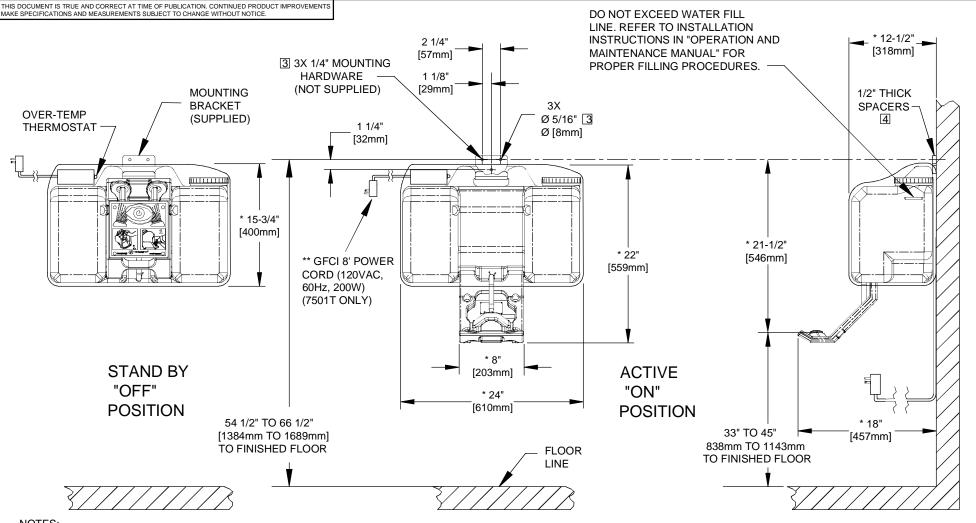

#### NOTES:

- 1. TO COMPLY WITH ANSI Z358.1-2009 FOR EMERGENCY EYEWASH OR EYE/FACE WASH AND SHOWER EQUIPMENT:
  - UNIT SHALL BE INSTALLED IN ACCORDANCE WITH MANUFACTURE'S INSTRUCTIONS AND ACCEPTABLE PLUMBING PRACTICES.
  - EYEWASH OR EYE/FACE WASH SHALL BE POSITIONED WITH NOZZLES NOT LESS THEN 83.3 CM (33 IN.) AND NO GREATER THAN 114.3 CM (45 IN.) FROM SURFACE ON WHICH USER STANDS AND 15.3 CM (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
- 2. UNIT MUST BE LEVEL FROM FRONT TO BACK AND SIDE TO SIDE.
- 3 ALL THREE MOUNTING HOLES ON MOUNTING-BRACKET MUST BE USED TO PROPERLY SECURE EYEWASH UNIT TO WALL.
- 4 LOCATE ONE 1/2" THICK SPACER (QTY. 3 SUPPLIED) BEHIND EACH HOLE IN THE MOUNTING BRACKET AS SHOWN.
- 5. \* DIMENSIONS MAY VARY ±1/2" [12.7mm].
- 6. \*\* UNIT MUST BE FILLED WITH WATER BEFORE CONNECTING TO POWER SOURCE. (NOTES CONTINUED ON SHEET 3 OF 3)

MODEL 7501T/7501T240 - WITH HEATED JACKET (SHOWN)

MODEL 7501 (SEE SHEET 1 OF 2)

